



## Q<sup>2</sup> RIM


DIRECTIONS:



Wash the rim with a strong degreasing agent.



Always use Q<sup>2</sup>MIRON while cleaning the surface.  
If additional impurities like tar are visible, you can remove them with Q<sup>2</sup>M CLAY.  
Use Q<sup>2</sup>M PREP before applying the coat (isopropyl alcohol does not fully degrease the surface).

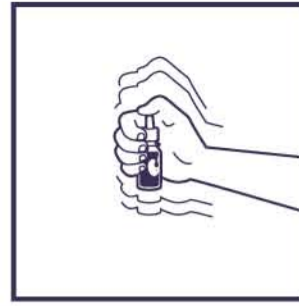

Shake the Q<sup>2</sup>RIM bottle well before use.

## Q<sup>2</sup> TRIM


DIRECTIONS:



Wash and degrease trim surface with a strong degreasing agent.



Ensure the surface is oil free and completely dry.

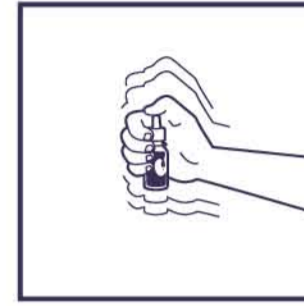

Shake the bottle before use.



Wipe Q<sup>2</sup>TRIM onto the surface in a crisscross pattern. Ensure a thick layer has built up.



Apply a thick layer with the attached applicator.



Wipe off after 2- 5 minutes depending on climate (ask your reseller for advice).



The coat is fully dry after 24 hours. Only after that time can the car be driven.

Drying process can be shortened if the coating is heated with infrared lamps for 1 hour.

PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.
- Avoid applying in direct sunlight.



PRECAUTIONS:

- Skin and eye protection recommended.
- Use only in a well-ventilated area.
- Keep out of reach of children
- Avoid use in direct sunlight
- Store in a dark, dry and cool place
- Seek medical attention if swallowed or if the user feels unwell.



Wipe off if necessary after 2-5 minutes depending on climate (ask your reseller for advice).

## Q<sup>2</sup> VIEW

Q<sup>2</sup>CLEANSE:




Clean the window with a high quality glass cleaner.



Use a soft, thick sponge to rub the product in a circular motion into the surface. Work on small areas, ensure precise cleaning.



After few minutes polish light residue with a new, fresh microfiber cloth.

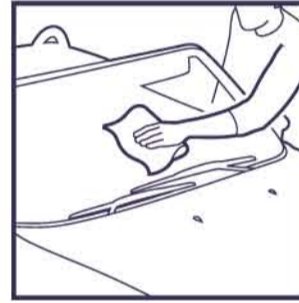


Wipe the residues of the product with a clean, damp cloth. Wait until the surface dries out completely and apply Q<sup>2</sup>REPEL.

Q<sup>2</sup>REPEL:



Always use the Q<sup>2</sup>CLEANSE cleaner to prepare the surface. Apply the product in a circular motion generously in small sections. Use whole 20ml bottle for windshield and 2 side windows.

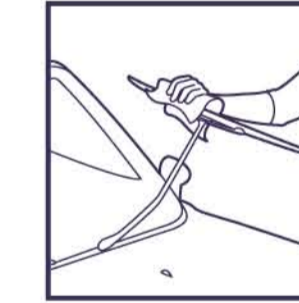

For maximum durability apply a small amount of the product onto your wiper blades or replace them with new ones. Avoid any water for at least a few hours.

PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.
- Avoid applying in direct sunlight.
- Seek medical attention if swallowed or if the user feels unwell.
- Watch out for fire, sparks - don't smoke while using.

## Q<sup>2</sup>M CLAY

DIRECTIONS:



Wash the car before claying.




Form a piece of the clay in the palm of your hand.



Move the clay in straight motion without pressure.



Provide sufficient lube for the clay process (you may use Q<sup>2</sup>MIRON or diluted Q<sup>2</sup>M BATHE). Lack of lube may cause light marring.

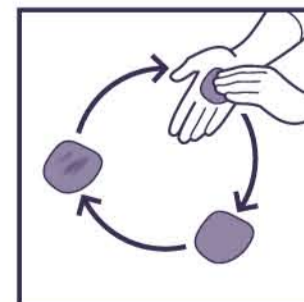

Check the surface of the clay bar - if any contamination are visible knead the bar.

Check the paint's surface for any signs of contamination left. If results are satisfying, move to the next panel/section.



Note, that if your clay bar falls on the ground, it is not reusable!

PRECAUTIONS:

- Keep out of reach of children.
- Always clay in a cool, shady place.