

Wash the rim with a strong degreasing agent.




Always use Q<sup>2</sup>M IRON and Q<sup>2</sup>M TAR while cleaning the surface.

If additional impurities are visible, you can remove them with Q<sup>2</sup>M CLAY. Use Q<sup>2</sup>M PREP before applying the coat (isopropyl alcohol does not fully degrease the surface).



Shake the bottle well before use.

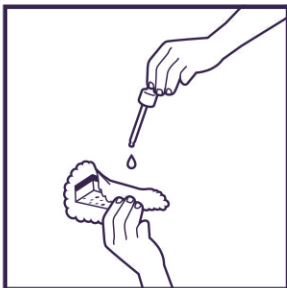

Apply a thick layer with the attached applicator.



Wipe off after 2- 5 minutes depending on climate (ask your supplier for advice).

The coat is fully dry after 24 hours. Only after that time can the car be driven. The drying process can be shortened if the coating is heated with infrared lamps for 1 hour.

#### PRECAUTIONS:

- Skin protection recommended
- Work in a well-ventilated area
- Store in a dark, dry and cool place
- Keep out of reach of children
- Avoid applying in direct sunlight