






Ensure that the surface is well cleaned and degreased. Use of **Q²M PREP** is recommended.

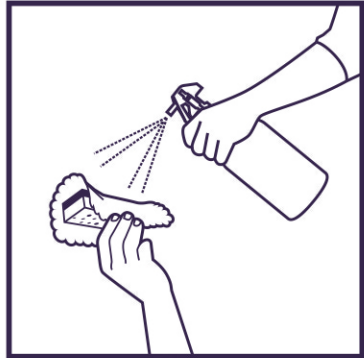

Apply a small amount of the product onto the surface using a suede applicator.

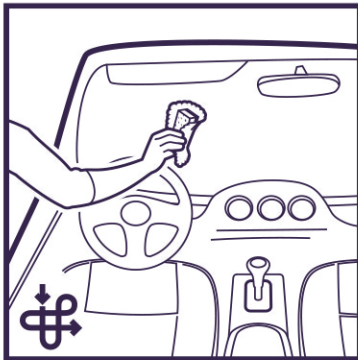

Always apply in a criss-cross motion untill a hardly visible haze remains.

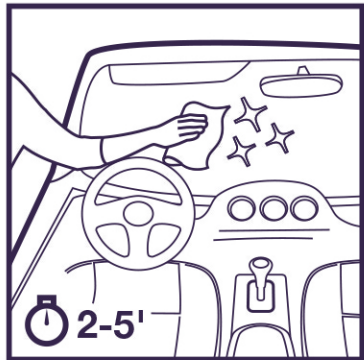

Wipe after 2-5 minutes with a soft microfibre.