





Wash and degrease the trim surface with a strong degreasing agent.



Ensure the surface is oil free and completely dry. Use **Q2M PREP** before applying the coat.

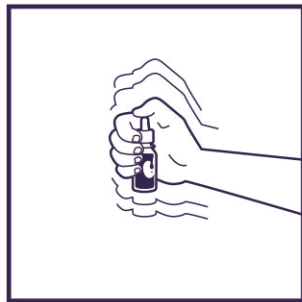

Shake the bottle before use.

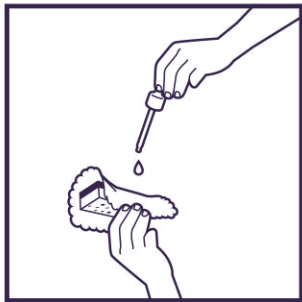

Wipe **Q<sup>2</sup>TRIM** onto the surface in a crisscross pattern. Ensure a thick layer has built up.



#### PRECAUTIONS:

- Skin protection recommended
- Work in a well-ventilated area
- Store in a dark, dry and cool place
- Keep out of reach of children
- Avoid applying in direct sunlight
- Seek medical attention if swallowed or if the user feels unwell
- Watch out for fire or sparks
  - don't smoke while using



Wipe off if necessary after 2-5 minutes depending on climate (ask your supplier for advice).