



Ensure that the surface is cleaned, degreased and fully dried before application

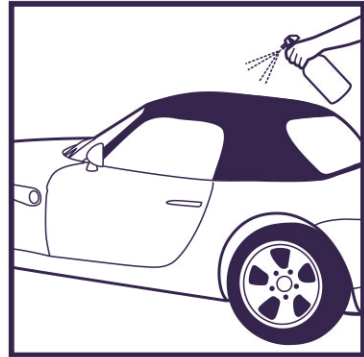

Apply a generous amount of the product and let it freely settle on the surface(80ml/m<sup>2</sup>)

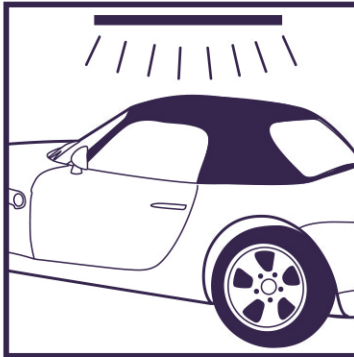

Let dry in direct sunlight or accelerate with an IR lamp



Do not let the coating come into contact with water or chemicals for at least 12hours.

Do not spray on paint or glass! Protect other surfaces before use. Do not leave to dry on any painted, plastic or glass surface. Remove from any non-fabric surfaces with **Q<sup>2</sup>M PREP** immediately.